INSTRUCTIONS MANUAL

4-Light Semi-Flush Mount Fixture

Menlo Park Collection

HOME DEPOT SKU N2008 (UPC 887016005840)

Brushed Nickel Finish

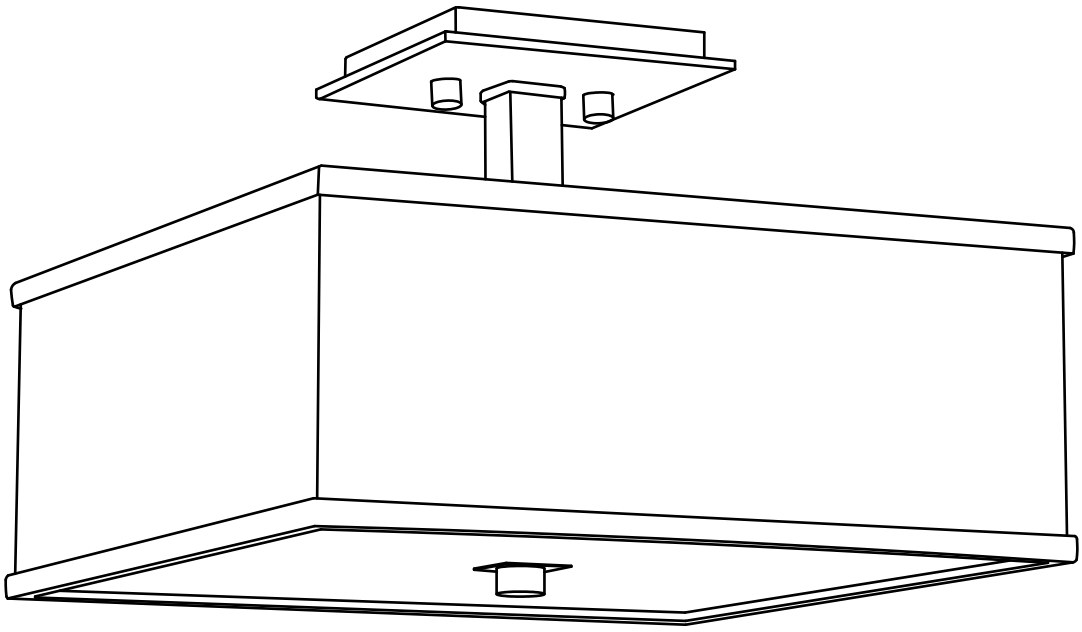

Thank you for purchasing this Hampton Bay Semi-Flush Mount Fixture. This product has been manufactured with the highest standards of safety and quality.

FEATURES:

1. Easy to install.

2. For energy savings this fixture has been engineered to safely use a Self Ballasted Compact Fluorescent Lamp in place of an incandescent lamp.

QUESTIONS, PROBLEMS, MISSING PARTS:

Before returning to your local Home Depot, please call our Customer Service Team at 1-877-527-0313 or visit www.homedepot.com. Please reference your SKU (N2008) or UPC (887016005840).

WARNING

BECAUSE FAILURE TO COMPLY CAN LEAD TO INJURY:

1. Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box.

2. CONSULT A QUALIFIED ELECTRICIAN IF YOU HAVE ANY ELECTRICAL QUESTIONS. If you have any non-electrical questions about this fixture, please call our Customer Service Team at 1-877-527-0313 or visit www.homedepot.com. Please reference your SKU (N2008) or UPC (887016005840).

3. KEEP your receipt and these Instructions for Proof of Purchase.

TOOLS REQUIRED FOR INSTALLATION AND ASSEMBLY (not included):

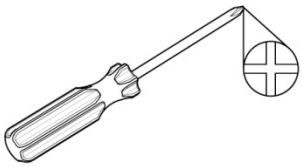

Phillips Screwdriver

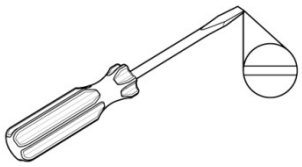

Flathead Screwdriver

Wire Cutters

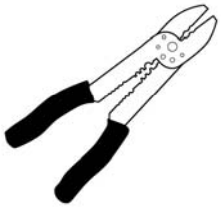

Wire Strippers

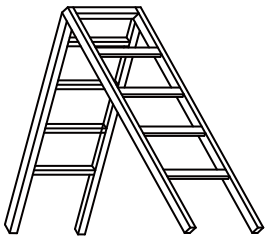

Ladder

Safety goggles

Electrical Tape

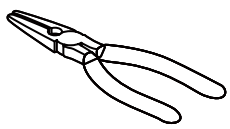

Pliers

Light Bulb (x4)
(60 watt maximum)

PARTS INCLUDED FOR ASSEMBLY (parts are not to scale):

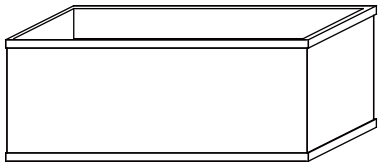

1 ea Shade (# 2)

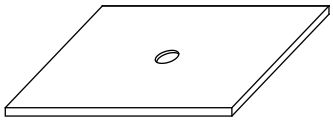

1 ea Acrylic Pad (#4)

1 ea Hex Nuts (#3)

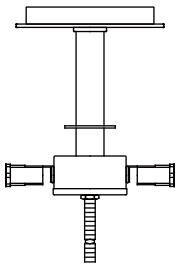

1 ea Main Fixture Body (#1)

1 ea Metal Pad (# 5)



1 ea Top Frame (#8)

1 ea Bottom Frame (#9)



4 ea Screws (# 7)

1 ea Finial (# 6)



1 ea "L" Phillips Screwdriver (# 24)

ASSEMBLY INSTRUCTIONS:

1. Carefully unpack the fixture. Lay out all parts on a clean surface.

2. Attach the Top Frame (#8) to the Shade (#2), as shown.

3. Install incandescent Light Bulbs (not provided) into the sockets of the Main Fixture Body (#1). Do not exceed a 60 watt incandescent light bulb. (Fig. 1)

4. The Shade (#2) should be fastened into the Main Fixture Body (#1), and secured with Screws (#7); using a Phillips Screwdriver (# 24), as shown (Fig.2). Thread a Hex Nut (#3) onto the Nipple on the Main Fixture Body(#1). Adjust the Hex Nut (#3) to the desired height. Place the Bottom Frame (#9) and the Acrylic Pad (#4) over the Main Fixture Body (#1), making sure the Nipple feeds through the center hole of the Acrylic Pad (#4), and then secure them with the Metal Pad and the Finial (#6) .

ASSEMBLY:

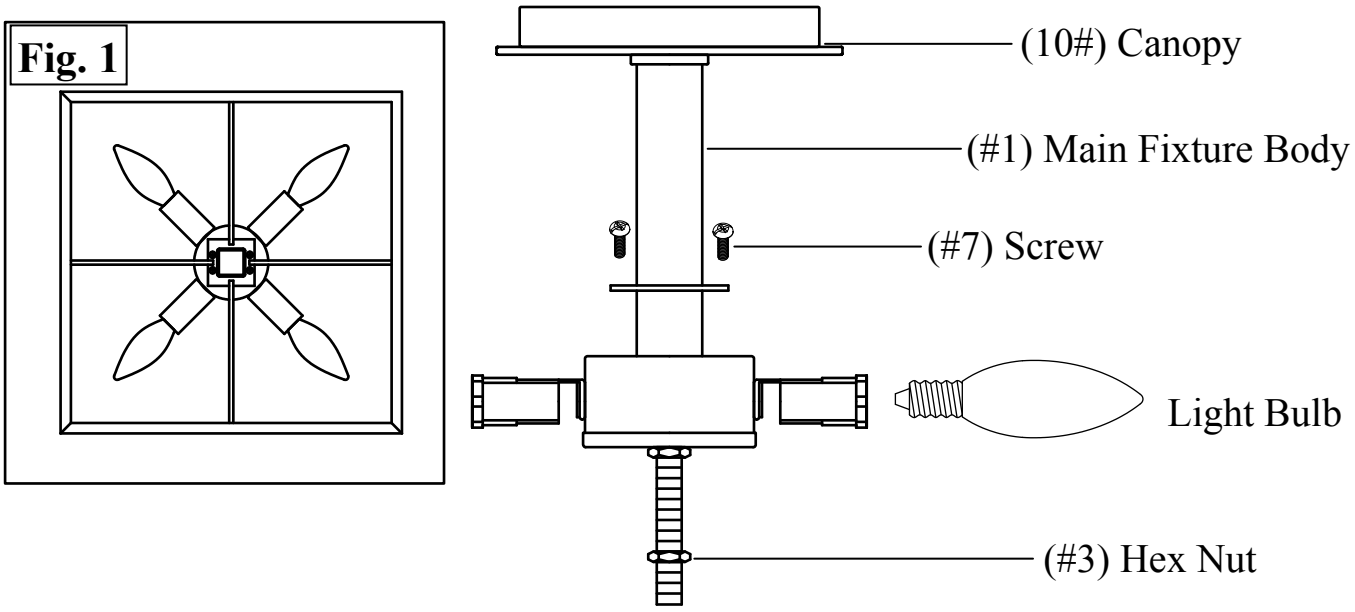
Fig. 1
(10#) Canopy
(#1) Main Fixture Body
(#7) Screw
Light Bulb
(#3) Hex Nut

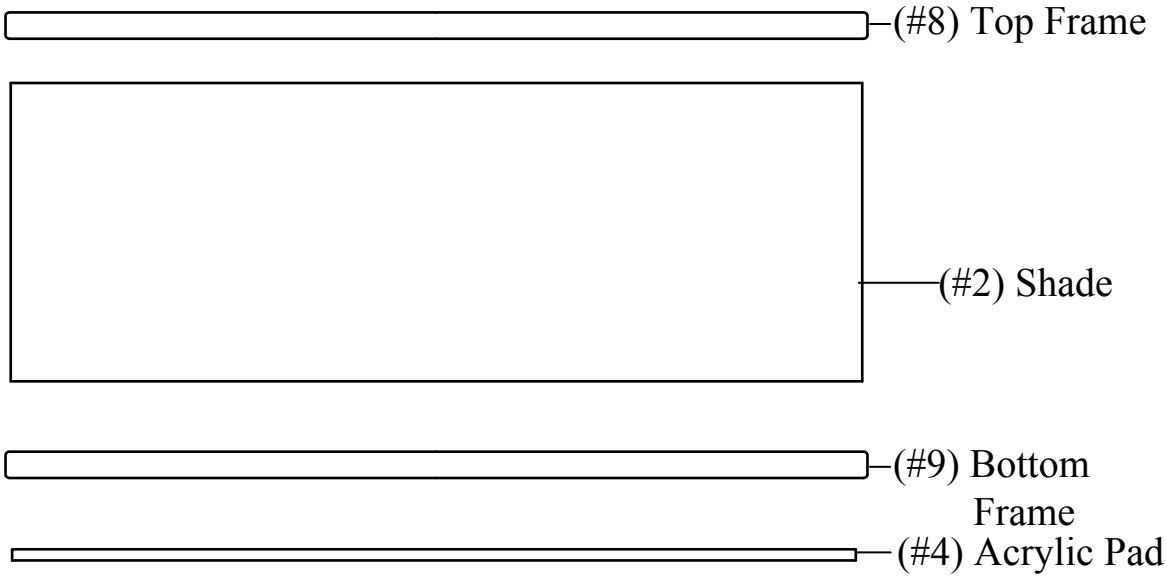
(#8) Top Frame
(#2) Shade
(#9) Bottom Frame
(#4) Acrylic Pad
(#5) Metal Pad
(#6) Finial

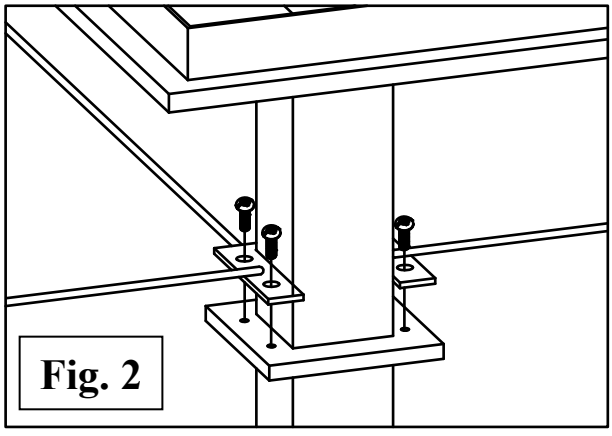
Fig. 2

PARTS INCLUDED FOR INSTALLATION (parts are not to scale):

2 ea End Caps (#11)

2 ea Hex Nuts (#12)

2 ea Fixture Mounting Screws (#13)

2 ea Mounting Screws (#14)

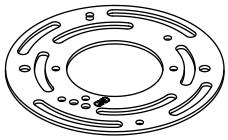

1 ea Mounting Plate (#15)



3 ea Wire Connectors (#16)

INSTALLATION INSTRUCTIONS:

1. Thread the Fixture Mounting Screws (#13) into the provided holes of the Mounting Plate (#15), as shown. Thread the Hex Nuts (#12) onto the Fixture Mounting Screws (#13). Do not tighten the Hex Nuts (#12) at this time.

2. Pull the power supply wires out of the Outlet Box, and attach the Mounting Plate (#15) to the Outlet Box using the Mounting Screws (#14), as shown.

3. Attach the Black Supply Wire (A) to the Black Fixture Wire (A1) and the White Supply Wire (B) to the White Fixture Wire (B1) using Wire Connectors (#16). Connect the Fixture Ground Wire (C1) and the Supply Ground Wire (C) together using a Wire Connector (#16). Wrap all wire connections with electrical tape for a more secure connection.
   Note: Consult your local electrical code for approved grounding methods.

4. Carefully, tuck all the wires and wire connections into the Outlet Box. Place the Canopy (#10) over the Outlet Box and onto the Fixture Mounting Screws (#13). Adjust the Fixture Mounting Screws (#13) until they protrude out from the Canopy 1/4". Remove the Canopy (#10) and secure the position of the Fixture Mounting Screws (#13) by tightening the Hex Nut (#12) against the Mounting Plate (#15). Place the Canopy (#10) back into the Fixture Mounting Screws (#13), and secure it into place using the End Caps (#11) provided.

5. Installation is complete. Turn on power at the circuit breaker or fuse box. Turn the light switch on to activate the fixture.

INSTALLATION:

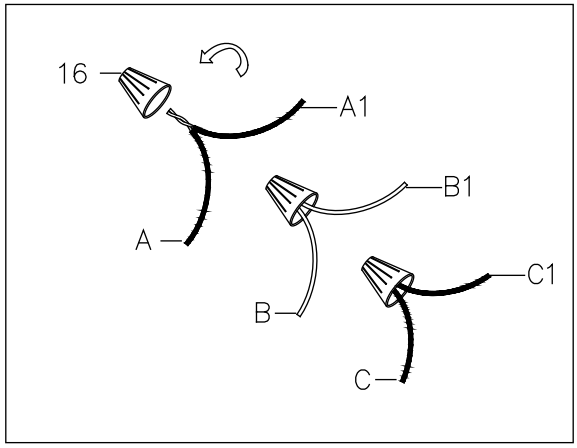

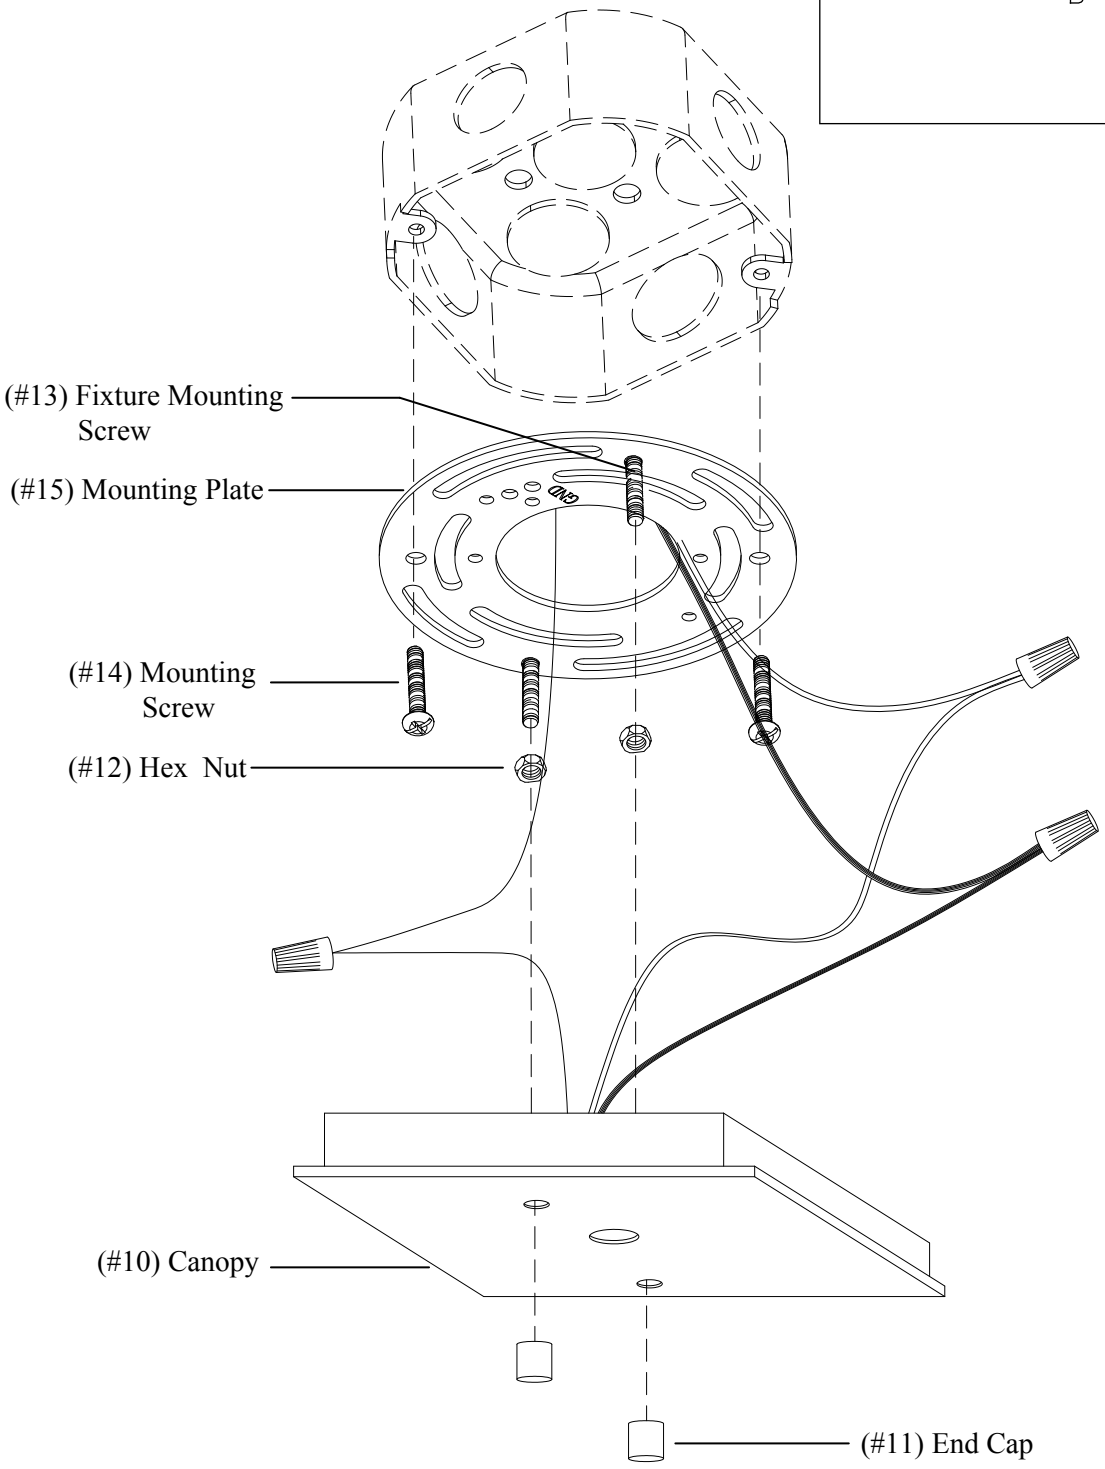

TROUBLESHOOTING:

	Possible Cause	Corrective Action
Light will not turn on.	1. Power is off.	1. Make sure power supply is on.
	2. Faulty switch.	2. Test or replace switch.
	3. Faulty wire connection	3. Check wiring.
Fuse blows or circuit breaker trips when light is turned on.	Crossed wires or power wire is grounding out.	Check wire connections.

PRODUCT MAINTENANCE:

1. To clean the outside of the fixture, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the surface of the fixture.

2. To clean the inside of the fixture, first disconnect power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box. Next, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the interior surface of the fixture.

3. Do not use any cleaners with chemicals, solvents or harsh abrasives. Use only a dry soft cloth to dust or wipe carefully.

LIMITED WARRANTY

The manufacturer warrants this lighting fixture to be free from defects in materials and workmanship for a period of five (5) years from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect or mishandling. This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, or faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear. **The manufacturer does not warrant and specially disclaims any warranty, whether expressed or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor/expense costs involved in the replacement or repair of said product.**